



moving forward ▶



Customer Experience Center
1-800-331-4331

SIENNA

2008
Quick Reference Guide

2008 Sienna

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sienna.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Sienna operations. Every Sienna owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed "⚠CAUTION" information highlighted throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	7
Fuel tank door release and cap	7
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
FEATURES/OPERATIONS	
Air Conditioning/Heating	22-23
Audio	20-21
Auto lock functions²	8
Automatic Transmission	8
Bottle holders	25
Clock	13
Console box	13
Cruise control	18
Cup holders	26
Door-Power back	12
Doors-Power sliding	12
Dynamic Laser Cruise Control	18-19
Front seat console table	13
Light control-Instrument panel	19
Lights¹ & turn signals	9
Moonroof	11
Multi-information display (HomeLink [®]) ³	24
Parking brake	10
Power outlets	25
Rear seat entertainment system	24
Seat adjustments-Front	14
Seat adjustments-Rear	14
Seat arrangements	15
Seat heaters	11
Seats-Head restraints	15
Seats-Stowing third row seats	16-17
Seats-Tumble/Remove second row seats	16
Sunshade-Side	17
Telephone controls (Bluetooth [®])	21
Tilt and telescopic steering wheel	8
Windows	11
Windows-Power quarter	10
Window wipers & washers	10
SAFETY AND EMERGENCY FEATURES	
Door locks	27
Doors-Child safety locks	27
Seat belt comfort guide	27
Seat belts	28
Seat belts-Shoulder belt anchor	27
Spare tire & tools	29
Tire Pressure Warning System reset	28

¹ Visit your Toyota dealer for information on customizing this feature.

 
² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink[®] is a registered trademark of Johnson Controls, Inc.



OVERVIEW

Instrument panel

Overhead console

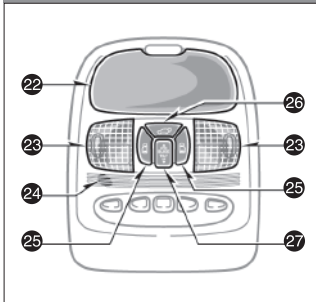

Steering wheel switches

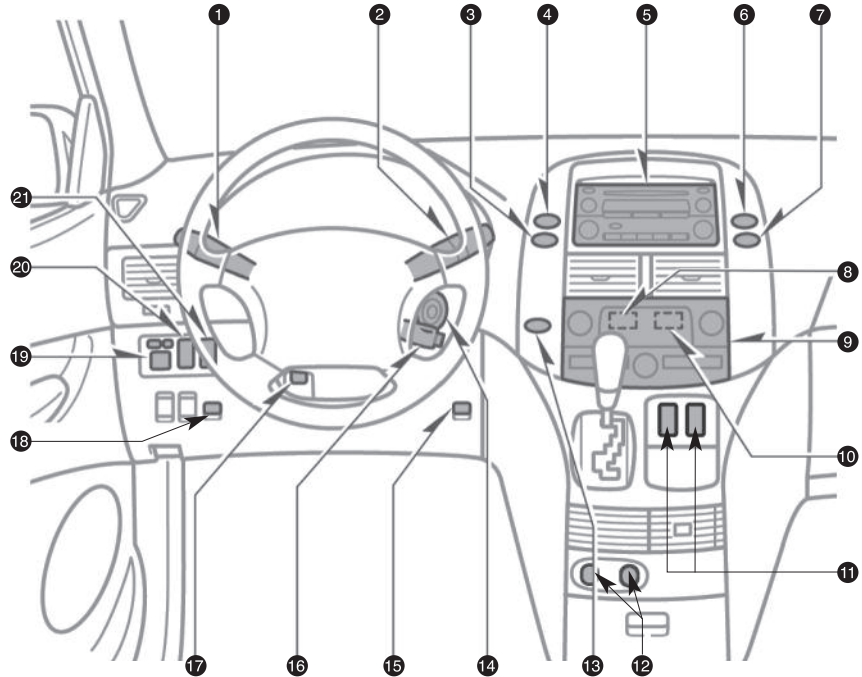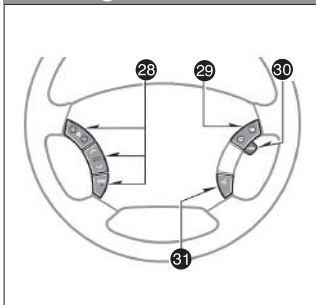  


- ❶ Headlight, turn signal and front fog light¹ controls
- ❷ Wiper and washer controls
- ❸ Rear window and outside rearview mirror defogger¹ and windshield wiper de-icer¹ switch
- ❹ Emergency flasher button
- ❺ Audio system or navigation system^{1,2}
- ❻ 115V AC Power outlet ON/OFF button¹
- ❼ AUX adapter
- ❽ Toyota park assist system and indicator¹
- ❾ Front Air Conditioning controls
- ❿ Front passenger occupant classification indicator
- ⓫ Seat heater switch¹
- ⓬ 12V DC Power outlets
- ⓭ Interior lights main switch
- ⓮ Engine switch
- ⓯ “TRAC OFF” (Traction Control “OFF”)¹
- ⓰ Cruise control or dynamic laser cruise control¹

- ⓱ Tilt and telescopic steering lock release
- ⓲ Tire Pressure Warning System reset
- ⓳ Power rearview mirror controls
- ⓴ Power quarter window switch¹
- ⓵ Headlight beam level control dial
- ⓶ Conversation mirror
- ⓷ Front personal lights
- ⓸ Microphone^{1,2}
- ⓹ Power sliding door button¹
- ⓺ Power back door button¹
- ⓻ Electric moonroof switch¹
- ⓼ Steering wheel audio controls^{1,2}
- ⓽ Telephone controls^{1,2}
- ⓾ Dynamic Laser Cruise Control distance switch¹
- ⓿ Speech command button^{1,2}

¹ If equipped

² For details, refer to the “Navigation System Owner’s Manual.”

 Instrument cluster

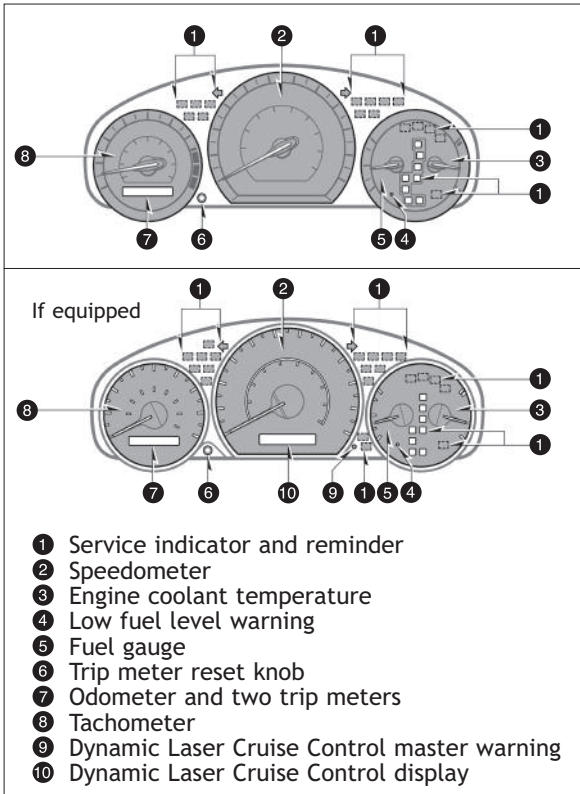

- ① Service indicator and reminder
- ② Speedometer
- ③ Engine coolant temperature
- ④ Low fuel level warning
- ⑤ Fuel gauge
- ⑥ Trip meter reset knob
- ⑦ Odometer and two trip meters
- ⑧ Tachometer
- ⑨ Dynamic Laser Cruise Control master warning
- ⑩ Dynamic Laser Cruise Control display

Indicator symbols

	Brake system warning ¹
	Driver seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder ¹ (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹

¹ For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2008 Owner’s Manual.


² If this light flashes, refer to “Cruise control,” Section 1-7, 2008 Owner’s Manual.

	Open door warning ¹
	Airbag SRS warning ¹
	Vehicle Stability Control/Traction Control warning ¹
	Low Tire Pressure Warning ¹
	Low windshield washer fluid level warning ¹
	Engine oil replacement reminder ¹
	Third seat fold incomplete warning ¹
	Theft deterrent/Engine immobilizer system indicator
	“AIRBAG ON” indicator
	“AIRBAG OFF” indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Turn signal indicator
	Automatic Transmission indicator
	Slip indicator
	Traction Control “OFF” indicator
	Cruise control indicator ² or Dynamic Laser Cruise Control indicator ³
	Dynamic Laser Cruise Control ready mode indicator
	Conventional cruise control mode indicator
	Anti-lock Brake System warning ¹

³ If this light flashes, refer to “Dynamic Laser Cruise Control,” Section 1-7, 2008 Owner’s Manual.

Keyless entry

 Locking operation

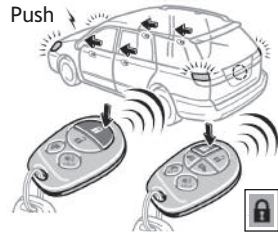

Unlocking operation

Push **ONCE**: Driver door
Push **TWICE**: ALL doors



NOTE: After unlocking, if a door is not opened within 60 seconds, all doors will relock for safety.

Power sliding door operation (if equipped)

 
Right side power sliding door

Push and hold



Left side power sliding door

Push and hold

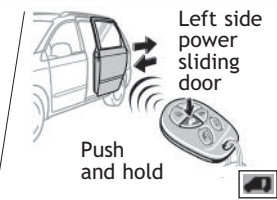

Power back door operation (if equipped)

Push and hold

 
 


Panic button


Push and hold




Hood release

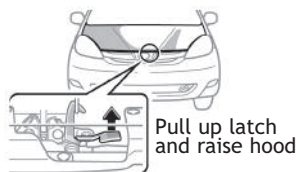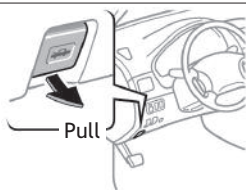


Fuel tank door release and cap

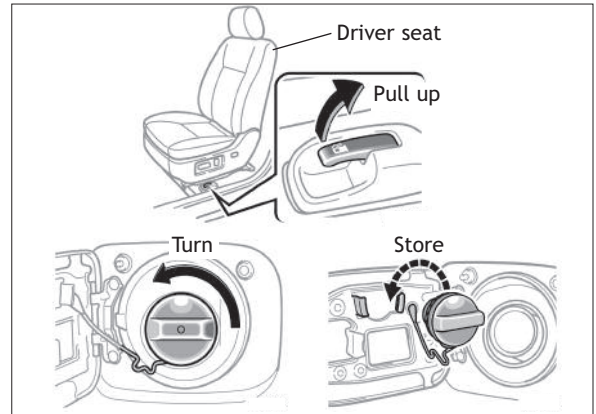 

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

 Engine maintenance

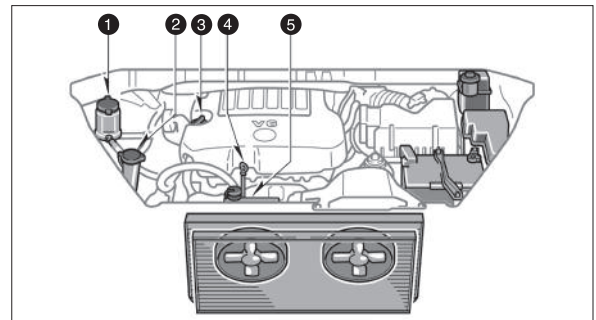

- 1 Power steering fluid reservoir
- 2 Windshield and rear window washer fluid tank
- 3 Engine oil filler cap
- 4 Engine oil level dipstick
- 5 Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS


Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from “Park.”
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when the engine key is turned to the “ACC” or “LOCK” position and driver’s door is opened.
- Doors unlock when shifting into “Park.”

Automatic Transmission


- | | |
|----------|-------------------|
| P | Park ¹ |
| R | Reverse |
| N | Neutral |
| D | Drive |
| 4 | Fourth gear |
| 3 | Third gear |
| 2 | Second gear |
| L | First gear |

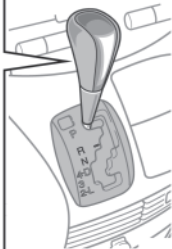 

¹ The engine switch must be ON, and the brake pedal depressed to shift from “Park.”

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

 Tilt and telescopic steering wheel

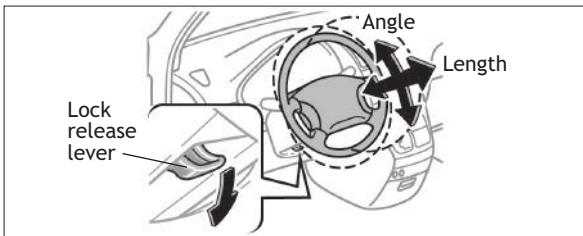


Hold wheel, push lever down, set angle and length, and return lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Lights & turn signals

 Headlights

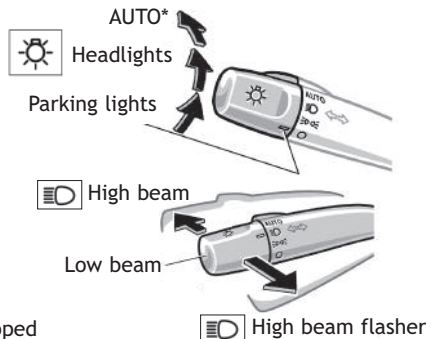

* If equipped

-Daytime Running Light system (if equipped)

Automatically turns on the headlights at a reduced intensity.

-Automatic light cut off system Automatically turns lights off after 30 seconds when any of the doors are opened and closed with the engine off. Lights may also be turned off by pushing lock button on remote once more after locking.

Turn signals

 


Front fog lights (if equipped)





Front fog lights come on only when the headlights are on low beam.

Headlight beam level control (if equipped)

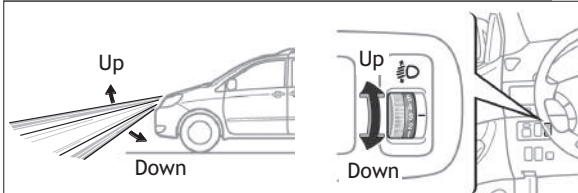


Higher number will lower the beam.

  
Window wipers & washers

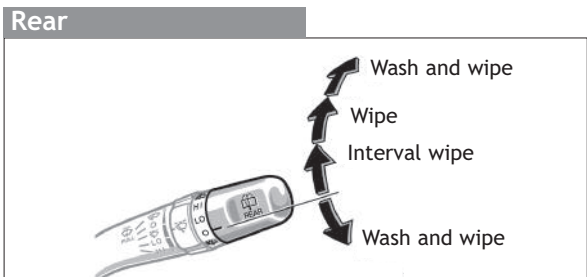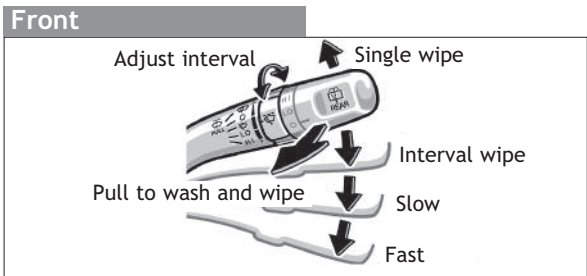


Parking brake

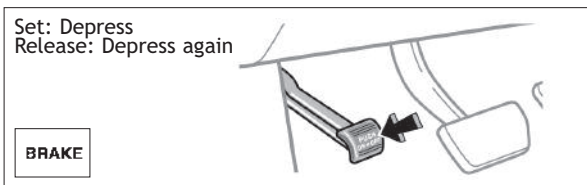 

Windows-Power quarter (if equipped)

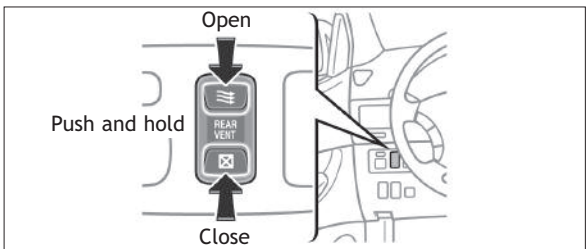 

Windows

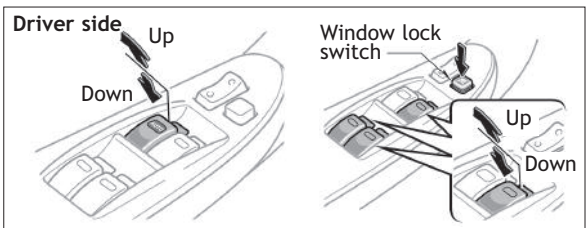 


Automatic operation* (driver side only) Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

* If equipped

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


NOTE: If battery is disconnected, the windows need to be reinitialized. Refer to the *Owner's Manual* for more details.

 Moonroof (if equipped)

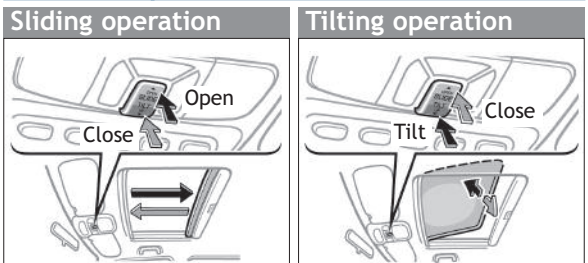


NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the *Owner's Manual* for more details.

 Seat heaters (if equipped)

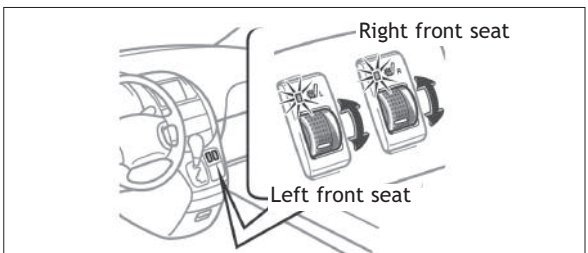


Doors-Power sliding (if equipped)

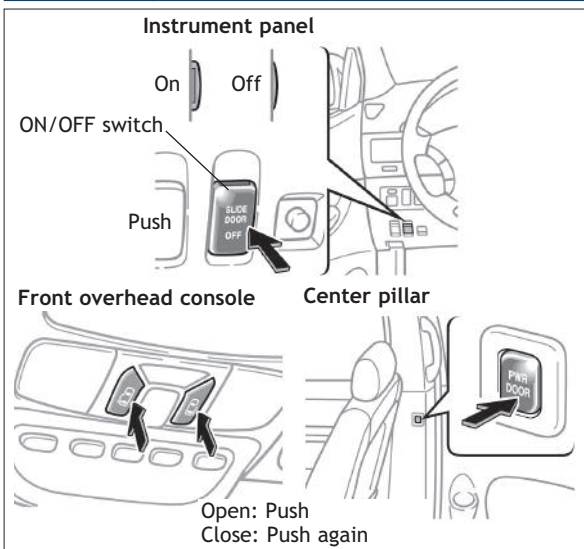 

NOTE:


- When the engine switch is in the “ON” position, power sliding doors will open only when gear selector is in the “P” (Park) position, and doors are unlocked. Refer to the *Owner’s Manual* for more details.
- An alarm will sound if a sliding door is open and the vehicle is shifted out of “Park.”
- If battery is disconnected, the power sliding doors need to be reinitialized. Refer to the *Owner’s Manual* for more details.

 Door-Power back (if equipped)

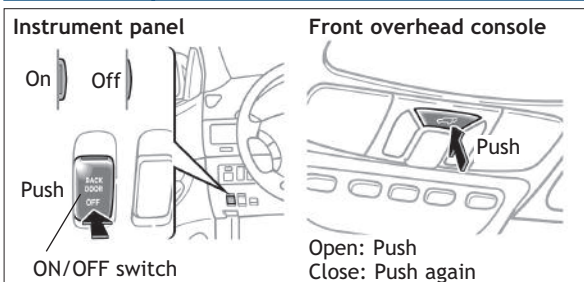

NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner’s Manual* for more details.

 
Console box (if equipped)

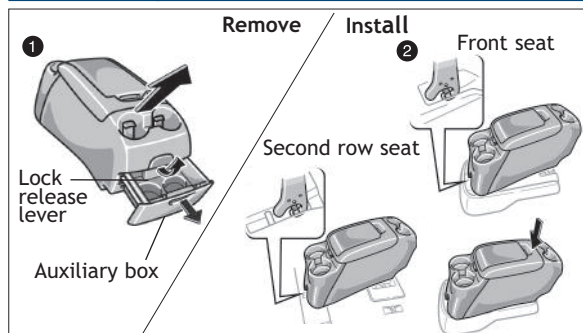


The console box can be removed and installed between the front or second row seats.

- 1 **To remove** Open the auxiliary box on the rear side, and pull the lock release lever. Lift the box from the rear to release it from the hook.
- 2 **To install** Place the hook into the striker. Lower box and push down to engage the rear lock.

 Front seat console table (if equipped)

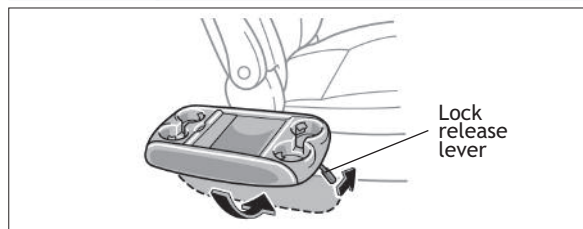

Clock

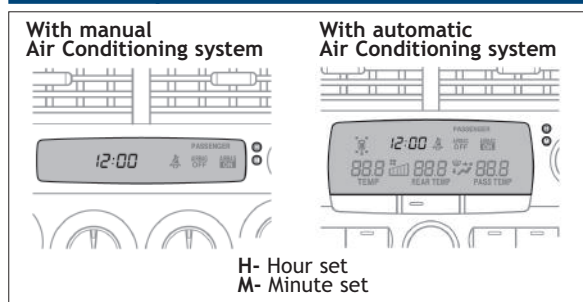 

Seat adjustments-Front

Manual seat



Power seat



- 1 Position
- 2 Height crank (driver side only)
- 3 Seatback angle
- 4 Lumbar support (driver side only*)
- 5 Position, cushion angle and height
- 6 Seatback angle

* If equipped

Seat adjustments-Rear

Second row seat

Outer



Center

 


Third row seat

Manual



Power

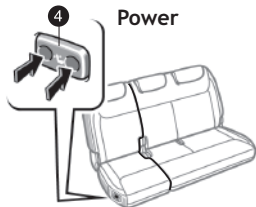


- 1 Position
- 2 Seatback release (from second row seat)
- 3 Seatback release (from third row seat)
- 4 Seatback angle


Refer to the *Owner's Manual* for more details.

Seats-Head restraints

 
Front

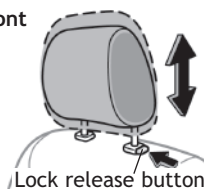

Rear

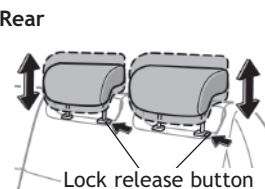 

Seat arrangements (examples)

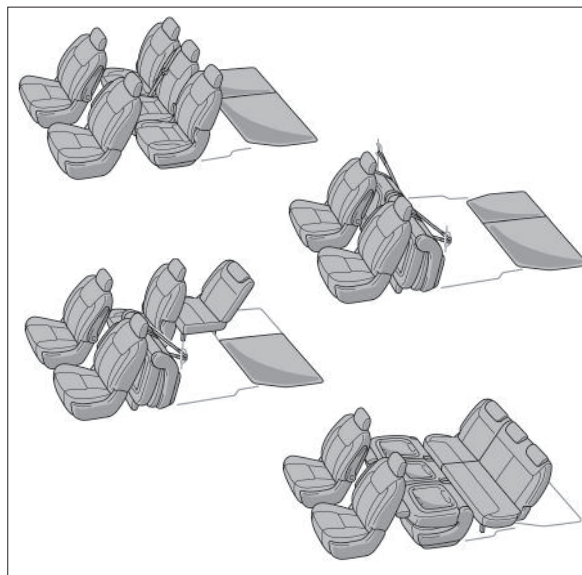 

These are some possible seat arrangements. Please read the following section and refer to the *Owner's Manual* for more information about seat positions.

7-passenger models



 
8-passenger models



7-passenger models The right seat can be placed in the inside or outboard position.


8-passenger models The center seat can be placed in the forward position or even with the other seats.

Seats-Tumble/Remove second row seats

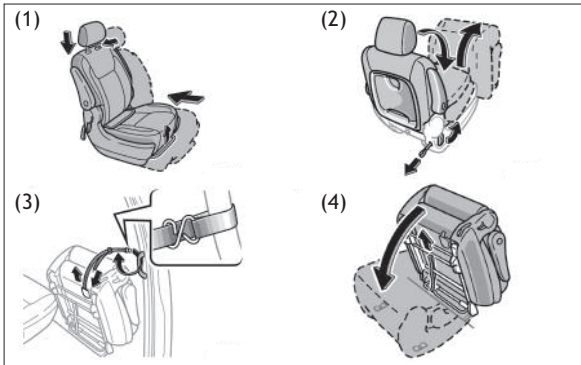


- (1) Lower the head restraint and slide the seat to the rear-most locked position.
- (2) Pull the strap or lever and tumble the seat.
- (3) Pass the strap through the assist grip.
- (4) Pull and hold the strap, then fold down the seat to disengage from front hooks.

 Seats-Stowing third row seats (manual)

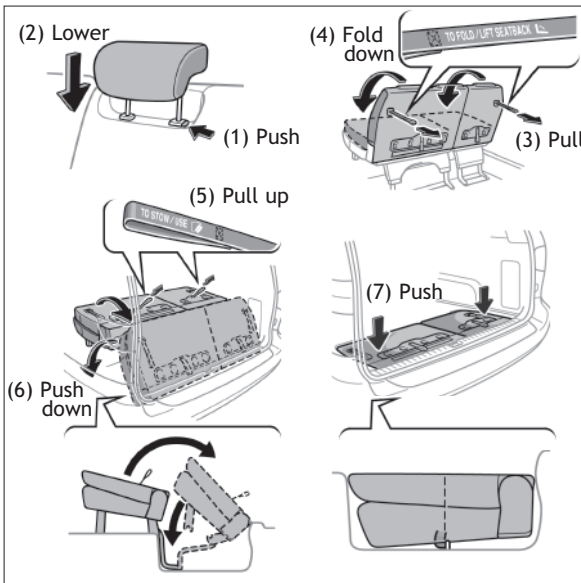

 
Seats-Stowing third row seats (power)(if equipped)

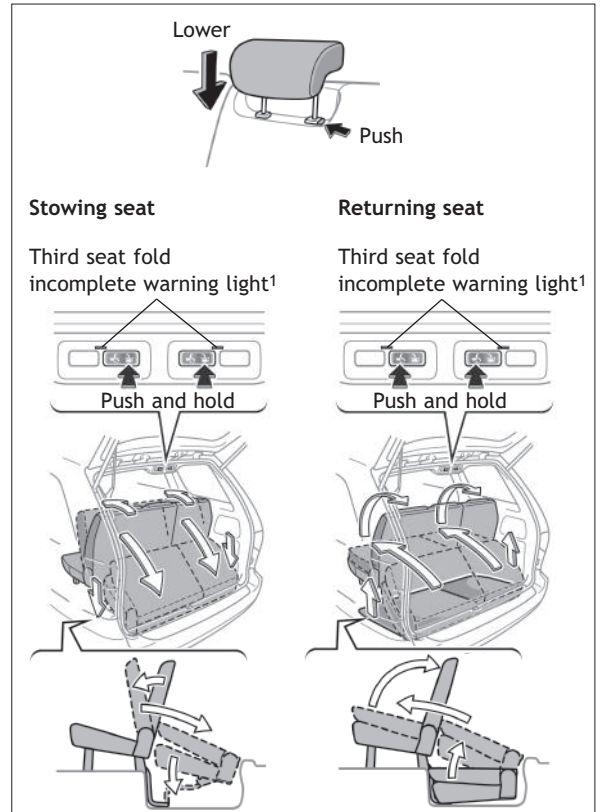

¹ This light will remain “ON” until the seat is fully open or stowed. An alarm will also sound for 10 seconds, and the **3RD SEAT** indicator will light up on the instrument panel.


Refer to the *Owner’s Manual* for more details.

 Sunshade-Side (if equipped)

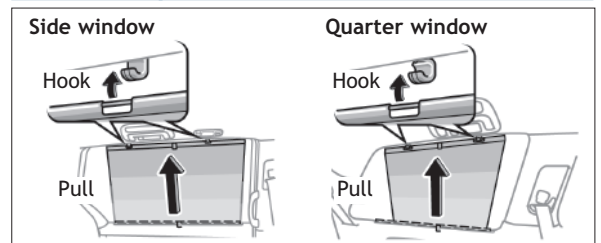


Cruise control (if equipped)

 System ON/OFF

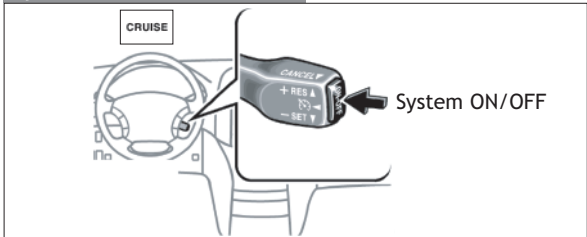

Functions

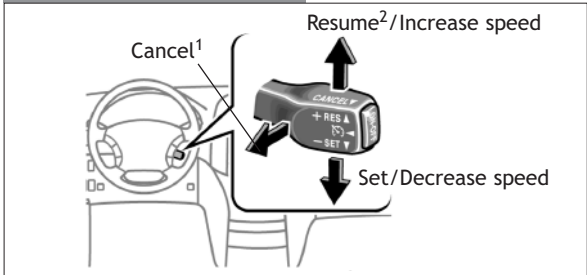 


- ¹ The set speed may also be cancelled by depressing the brake pedal.
- ² The set speed may be resumed once vehicle speed reaches 25 mph.

Dynamic Laser Cruise Control (if equipped)


Refer to the Owner's Manual for more details and complete safety precautions before attempting to use the "Dynamic Laser Cruise Control."

 Fixed speed mode

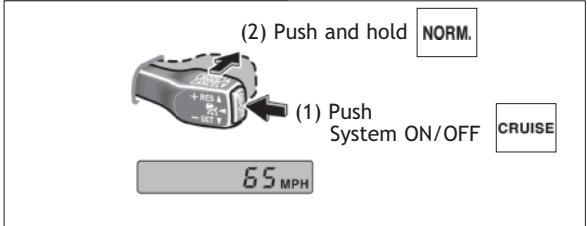

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section above, and the *Owner's Manual* for more details.

 
Distance control mode

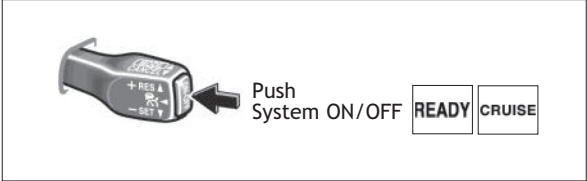


The distance control mode will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle in front of you, and accelerate back up to the selected speed if the vehicle in front of you changes lanes or speeds up.

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section at left, and your *Owner's Manual* for more details.

 NOTE: Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

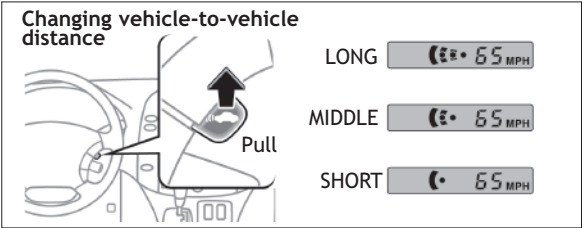

Light control-Instrument panel

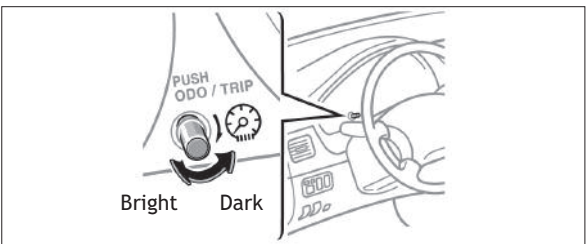 

Audio

Type 1

Eject CD
 Preset buttons - functions in other modes indicated above number.
 Push to turn ON/OFF
 Push to adjust tone & balance
 Seek station/CD track select
 Station/CD track scan
 Mode
 View CD information
 Push to skip up/down folder

Type 2 additional functions

Load CD(s)

CD PLAYER

To scan tracks on a disc Push “SCAN.” Push again to hold selection.

 
CD Changer (Type 2 only)

- To load one disc Push “LOAD” and insert one disc.
- To load multiple discs Push and hold “LOAD” until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.
- To select a file (MP3/WMA only) Turn “TUNE·FILE.”
- To select a folder (MP3/WMA only) Push either side of “MP3/FOLDER.”

RADIO


- To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.
- To scan stations Push “SCAN.” Push and hold to scan preset stations. Push again to hold selection.

Steering wheel switches (if equipped)

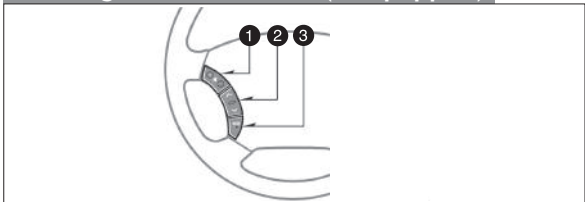


- 1 “ - + ”
Volume control
- 2 “ ^ v ”
-In radio mode Push to select a preset station; push and hold to seek the next strong station.
-In CD mode Push to skip up or down to next/previous track.
- 3 “MODE”
Push to turn audio “ON” and select an audio mode. Push and hold to turn the audio system “OFF.”

 AUX adapter

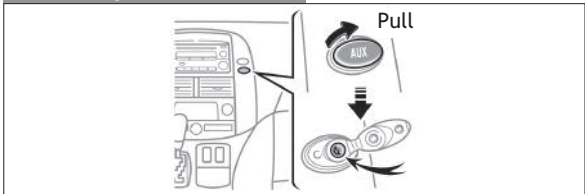

By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle’s speaker system.

 Telephone controls (Bluetooth®) (if equipped)

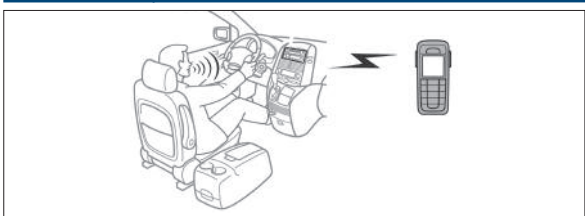


Bluetooth® technology allows dialing or receipt of calls without taking your hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to the *Owner’s Manual* for more details.


Air Conditioning/Heating

 Front manual Air Conditioning

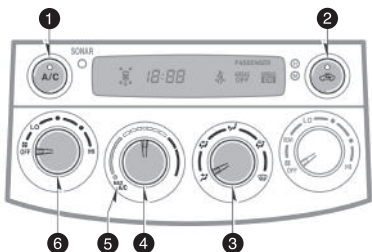


- ① Air Conditioning ON/OFF
Use fresh air to quickly cool interior, then change to recirculate for cooler air.
- ② Fresh or recirculated cabin air
- ③ Airflow vent
In “” or “” mode, use fresh air (“” indicator ON) to reduce window fogging.
- ④ Temperature
- ⑤ Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh.
- ⑥ Fan speed

 Rear manual Air Conditioning

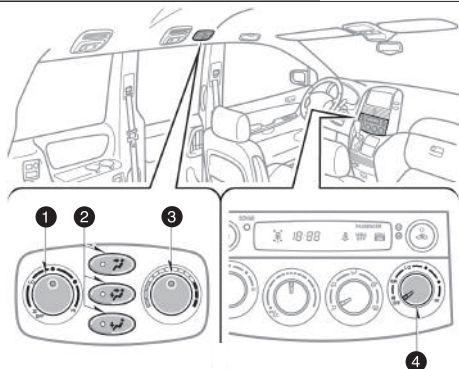


- ① Fan speed (rear)
- ② Airflow vent
- ③ Temperature
- ④ Fan speed (front)

 Front automatic Air Conditioning

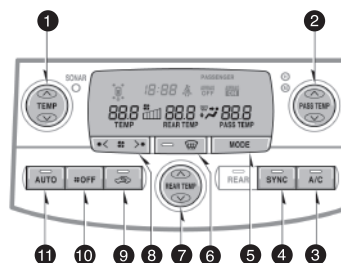


- ① Temperature (driver side)
- ② Temperature (front passenger side)
- ③ Air Conditioning ON/OFF
- ④ Synchronizes front and rear temperature settings
- ⑤ Airflow vent
In “” or “” mode, use fresh air (“” indicator ON) to reduce window fogging.
- ⑥ Windshield airflow/defogger
- ⑦ Temperature (rear passenger side)
- ⑧ Fan speed
- ⑨ Fresh or recirculated cabin air
- ⑩ Climate control OFF
- ⑪ Automatic climate control ON/OFF

 Rear automatic Air Conditioning

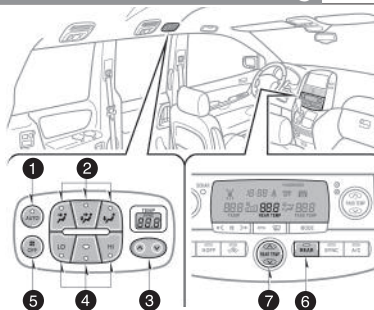


- ① Automatic climate control ON/OFF
- ② Airflow vent
- ③ Temperature selector (rear)
- ④ Fan speed
- ⑤ Climate control OFF
- ⑥ ON/OFF switch
- ⑦ Temperature selector (front)

 Rear seat entertainment system (if equipped)

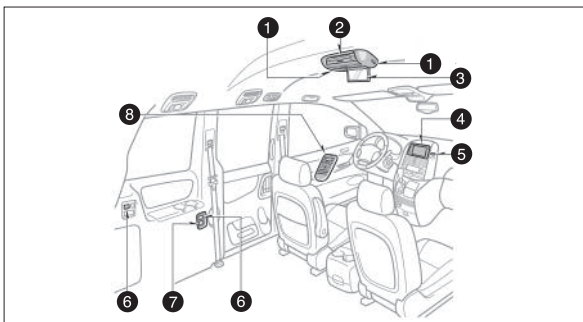

- ❶ Headphone jacks and headphone volume control
- ❷ DVD player
- ❸ DVD screen
- ❹ Front audio
- ❺ 115V AC Power outlet ON/OFF switch
- ❻ 115V AC Power outlets
- ❼ AV input adapter
- ❽ Remote control

 Multi-information display (HomeLink®)* (if equipped)

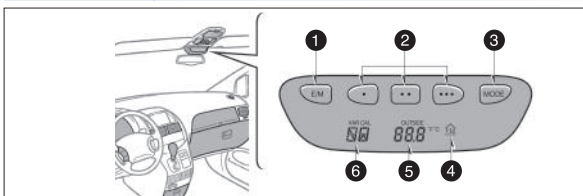

- ❶ Select standard or metric
- ❷ **Garage door opener buttons** Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Multi-information display,” Section 1-10 in the *Owner’s Manual* for more details.

For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>.

 
- ❸ Change display information
- ❹ Garage door opener indicator
- ❺ Information display
- ❻ Compass

* HomeLink® is a registered trademark of Johnson Controls, Inc.

Power outlets

12V DC

Instrument panel

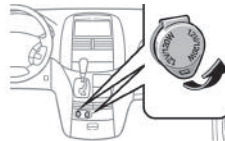


Luggage compartment



115V AC (if equipped)

Beside second row seat

 ON/OFF switch

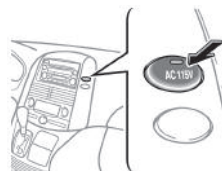


Beside third row seat



Designed for car accessories. Engine switch must be in the “ACC” or “ON” position to be used.

Bottle holders

 Front doors

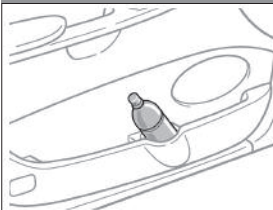


Sliding doors




Note: Do not place open containers in the sliding door bottle holders.

Cup holders

 
Instrument panel

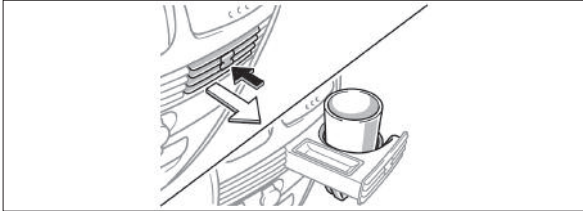


Front side table

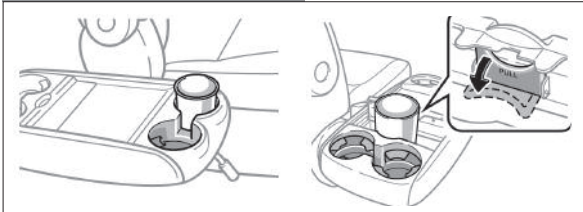 

Third row area

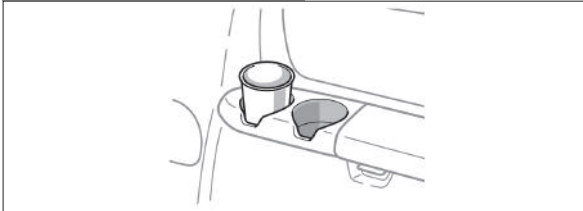 


Rear console box

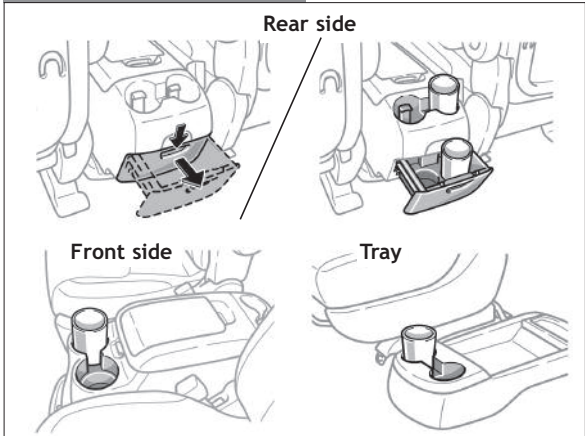 


SAFETY AND EMERGENCY FEATURES

 Door locks

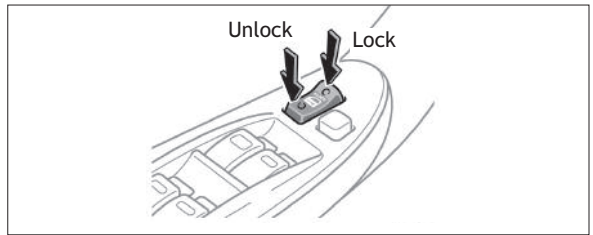


Doors-Child safety locks

 Rear door

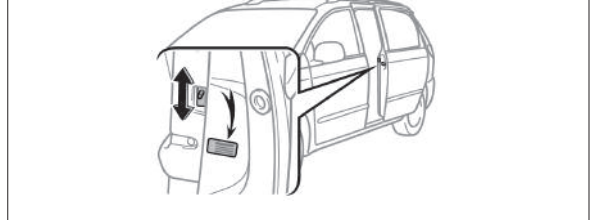

Moving the lever to "LOCK" will allow the door to be opened only from the outside.

 Seat belts-Shoulder belt anchor

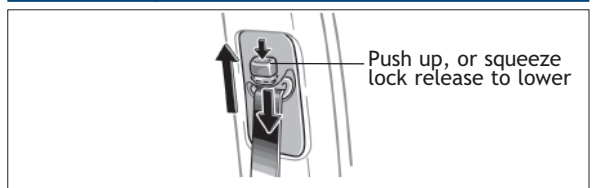


Seat belt comfort guide



SAFETY AND EMERGENCY FEATURES

 
Seat belts

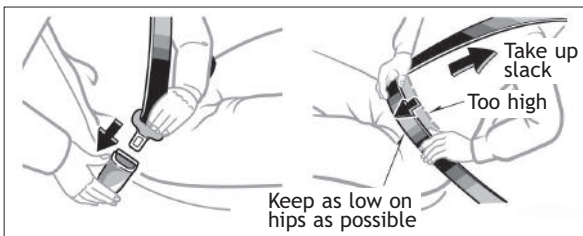


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

  Tire Pressure Warning System reset

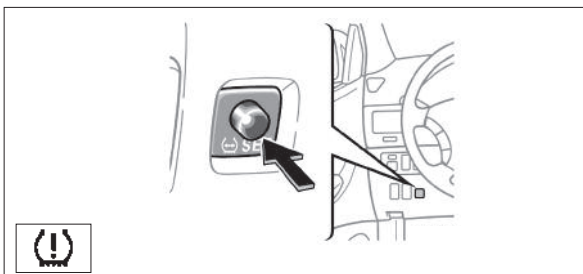

If tire pressure becomes critically low on any of the tires (excluding spare), indicator comes on. Pushing “ SET” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.

 
Refer to the *Owner's Manual* for details on system reset initialization.

Spare tire & tools

All-wheel drive models are equipped with run-flat tires. Refer to the *Owner's Manual* for more detail.

Tool and spare tire location



Two-wheel drive models

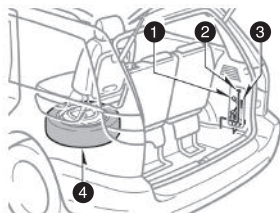

- ① Wheel nut wrench
- ② Jack handle
- ③ Jack
- ④ Spare tire

Removing the spare tire

  Two-wheel drive models

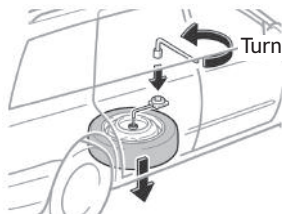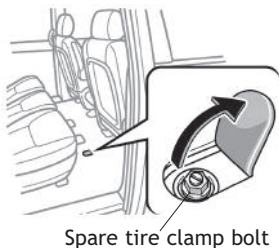

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.