



**Technical Service
BULLETIN**

March 14, 2003

Title:

**RE-INITIALIZATION OF TIRE
PRESSURE WARNING SYSTEM**

Models:

'04 Sienna

REVISED

PG003-03

PRODUCT GENERAL INFORMATION

TSB REVISION NOTICE:

**March 17, 2003: Introduction changed to more accurately describe situations needing re-initialization, Initialization Procedure 2 revised.
The previous TSB should be discarded.**

Introduction The Tire Pressure Warning System installed on the 2004 model year Sienna must be re-initialized after any of the following events:

- Tire Pressure Warning Light blinks every 0.25 seconds (4 times per second)
- Tire pressure adjustment
- Tire rotation
- Tire repair or replacement (one or more)
- Wheel repair or replacement (one or more)

Applicable Vehicles


- **2004** model year **Sienna** vehicles.

Warranty Information

| OP CODE | DESCRIPTION | TIME | OFF | T1 | T2 |
|---------|----------------------------|------|-----|----|----|
| N/A | Not Applicable to Warranty | - | - | - | - |


Initialization Procedure

1. Adjust all tires to the standard air pressure, as indicated on the tire pressure label on the vehicle.

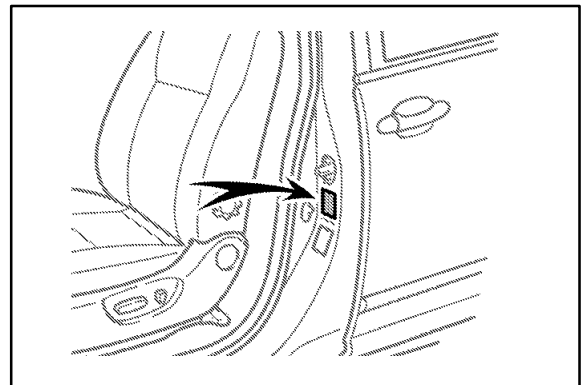

Initialization Procedure
(Continued)

2. Turn the ignition switch to the “ON” position with the vehicle stopped.

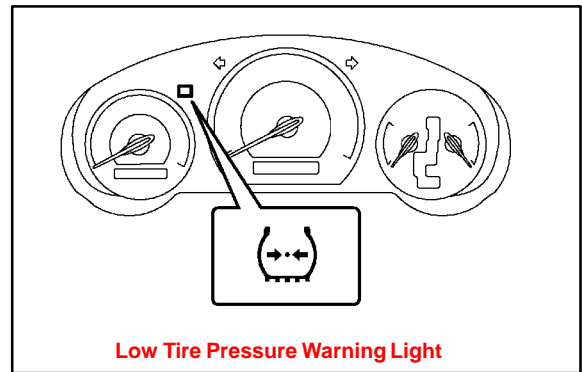

3. Press the tire pressure warning initialization switch until the low tire pressure warning light blinks 3 times in 6 seconds (one blink per two seconds).

NOTE:

If the low tire pressure warning light doesn't blink, release the switch once and press the tire pressure warning initialization switch again.

Reference:

While performing the system initialization, the tire pressure will not be monitored.

After the customer drives the vehicle under normal conditions for 30 to 60 minutes, initialization of the ECU will be complete and the system will begin monitoring tire pressure.

NOTE:

If the low tire pressure warning light begins to blink (twice per second) while driving, repeat the process above in step 2.

